

PC190 Quick Start Guide

Lumens™

⚠ Important

* Please activate your warranty at www.lumens.com.tw/reg

* Please visit our website www.lumens.com.tw/goto.htm to download latest version of Software, Multilingual User Manual and Quick Start Guide.

1. Package Contents



PC190


Quick Start Guide


* To download this manual in other languages, visit Lumens website


Download & Safety Instruction

4-Step Card

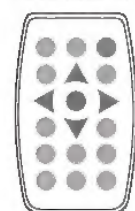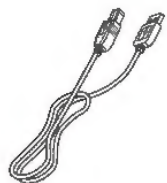Remote Control

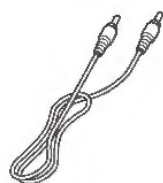USB Cable

VGA Cable

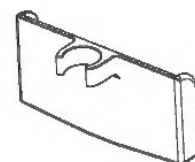Audio Cable

Power Cord


* Appearance may vary in different countries


Remote Control Holder

Accessory Pouch

Pouch

Microscope Adapter



⚠ The package contents are subject to change without notice.

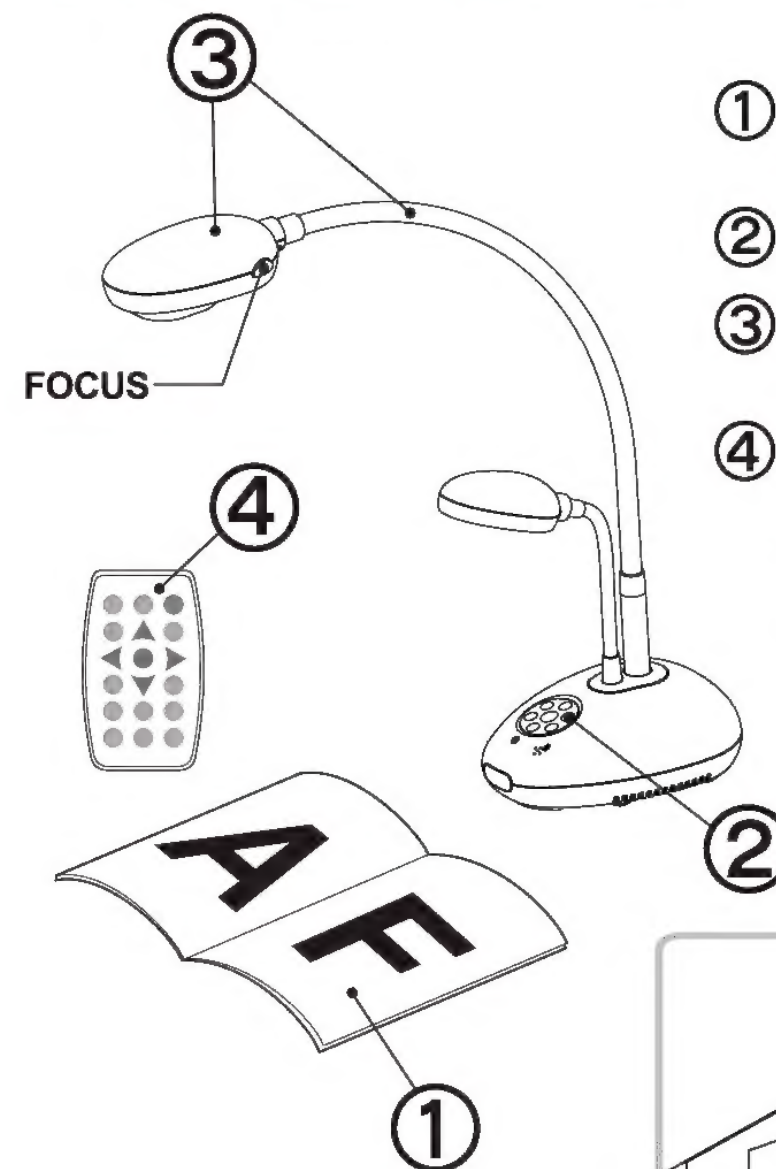2. Getting Started



- ① Place an object to be displayed under the camera.
- ② Turn the power on.
- ③ Adjust the gooseneck and lens to appropriate position.
- ④ Press the [AUTO TUNE] button to optimize the image. You are ready to teach / present.


* Each time the camera head is moved, press the [FOCUS] button to refocus the lens.

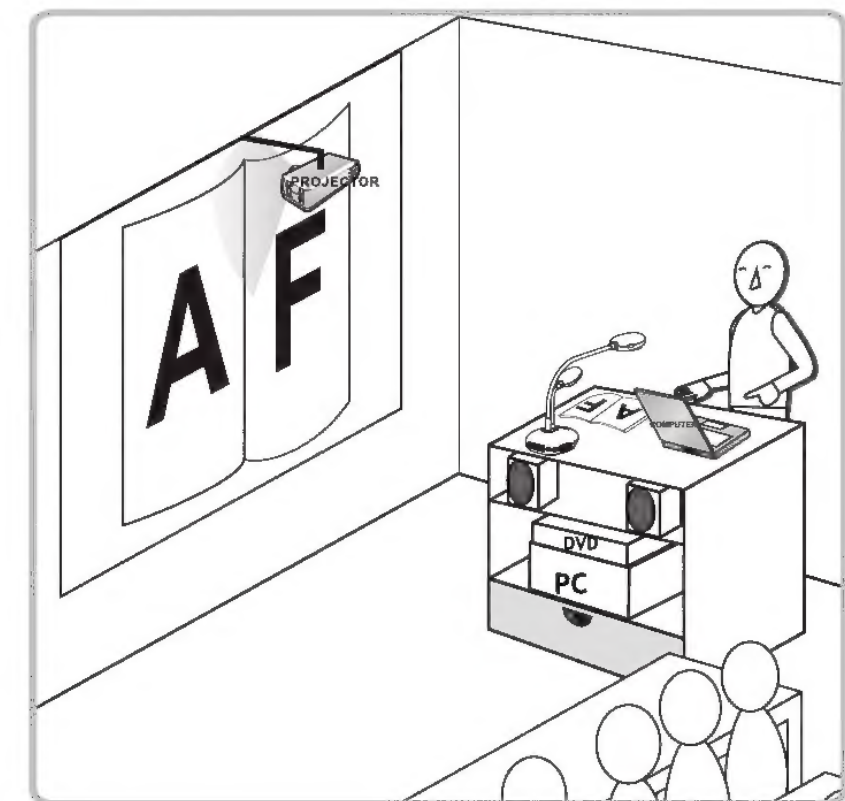


3. Installation & Connection

Lumens™

▼ Connect to a Projector or Monitor

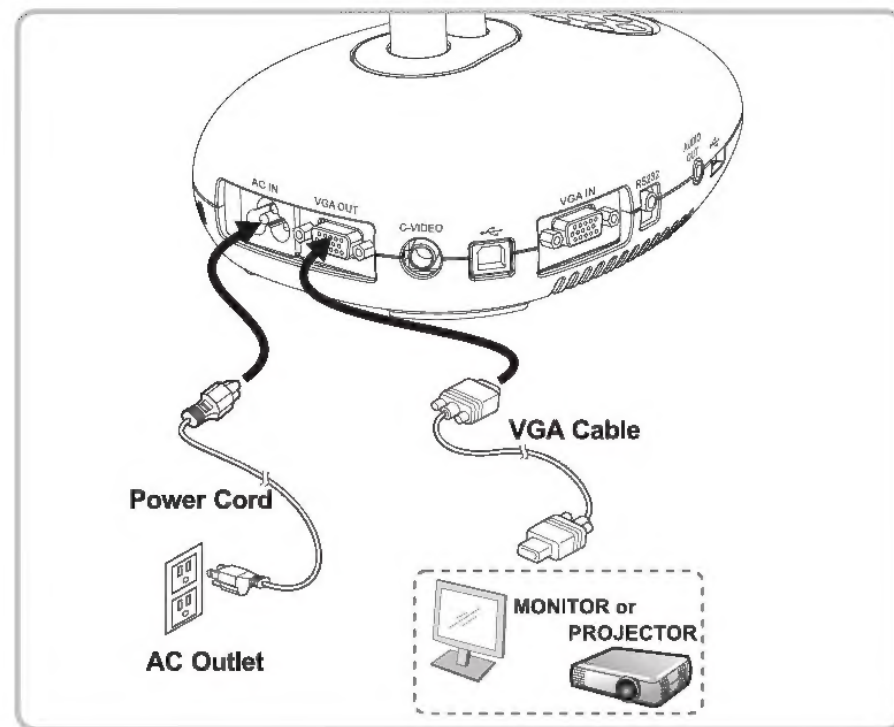


▼ Connect to a Computer and Use Podium View™ Software

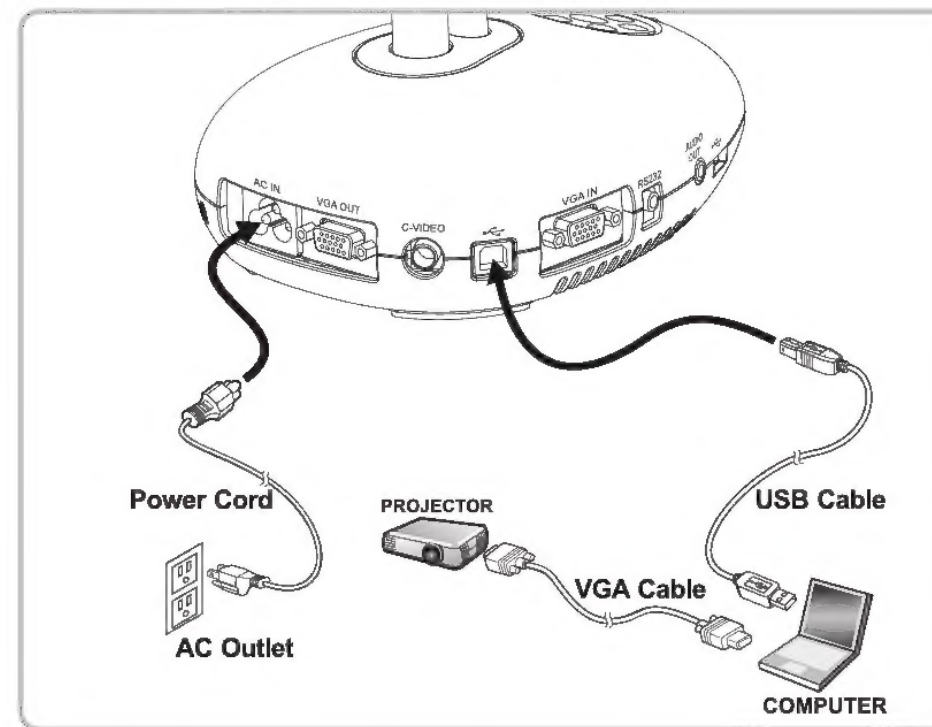


* Driver and software can be downloaded from Lumens website.

▼ Connect a Computer, Projector or Monitor simultaneously

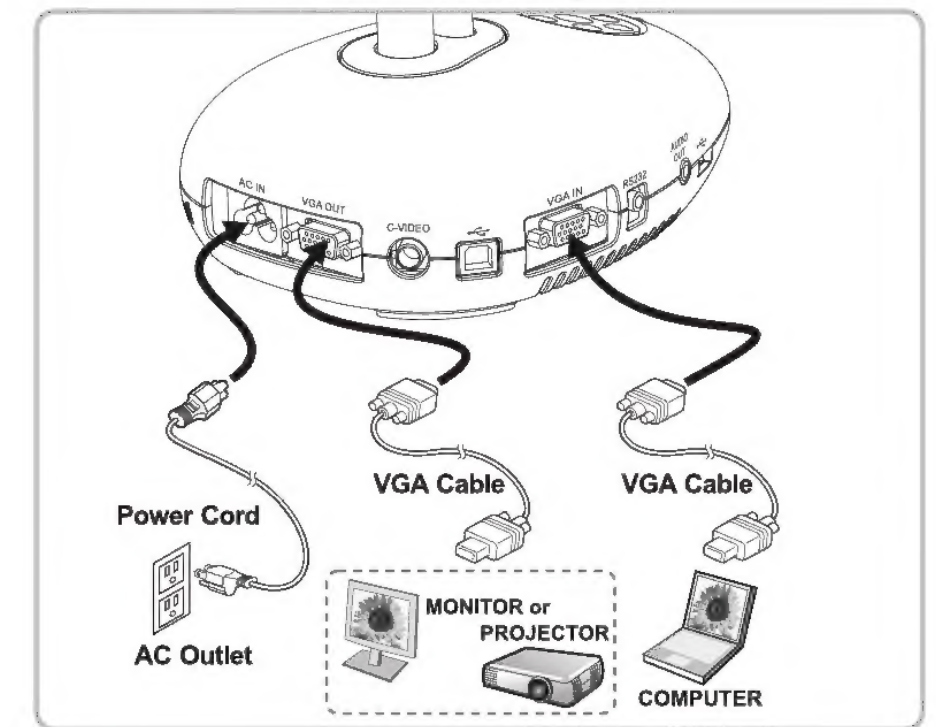


* Press [SOURCE] button to switch the image source.

▼ Connect to an Interactive Whiteboard (IWB)

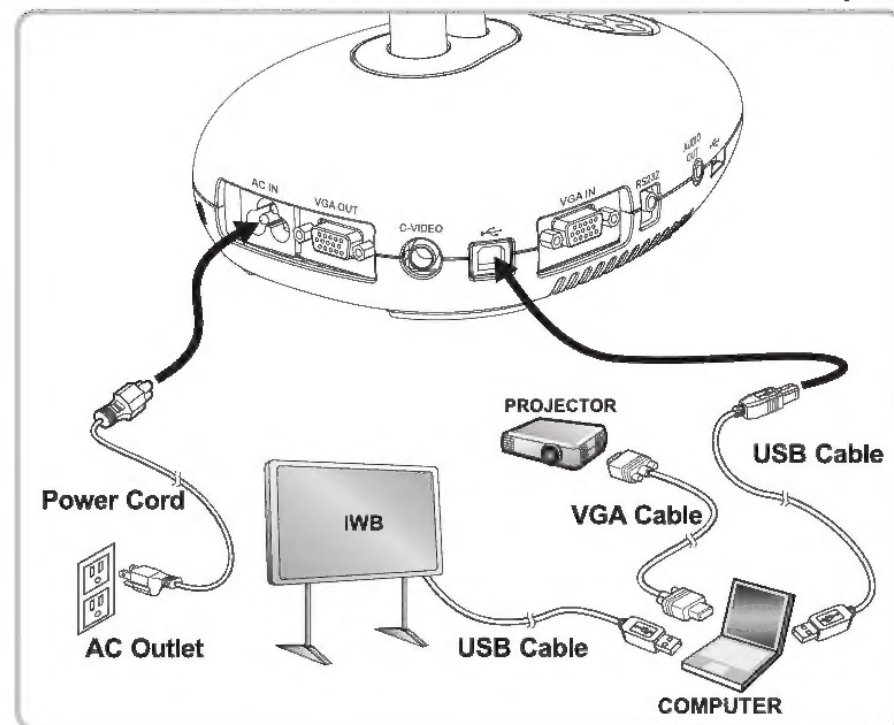

▼ Connect to a TV

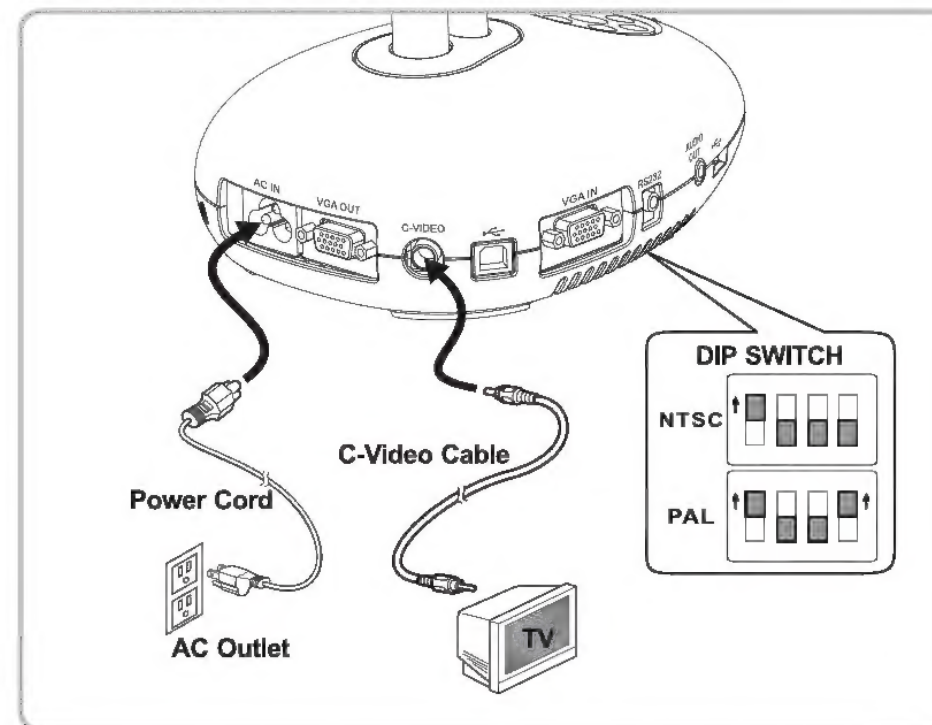

* NTSC: USA, CANADA, MEXICO, PANAMA, CHILE, JAPAN, TAIWAN, KOREA AND PHILIPPINES.

* PAL: Country / region not listed above.

* To make DIP switch set up effectiveness, please re-plug the power cord and reboot the machine. Once C-Video is on, VGA is not supported.

▼ Connect to a Computer and Flash Disk

